

AES3 I/O Relay Bypass Settings

AES3 I/O Relay Bypass

The AES3 inputs and outputs provide a relay bypass feature that, when enabled, activates in the event of a power failure or upon a deliberate command from the GUI.

In order to enable the relay bypass feature, the **jumpers for each AES3 pair (A)** must be in place as shown in Figure 1 below. Removing the jumpers prevents relay bypass from occurring.

Figure 1 - Relay Bypass

Revision #1

Created 2026-09-04 12:59:04 UTC by FK

Updated 2026-09-04 12:59:04 UTC by FK