


Power

Select **Power** from the **System** menu to access the power controls.

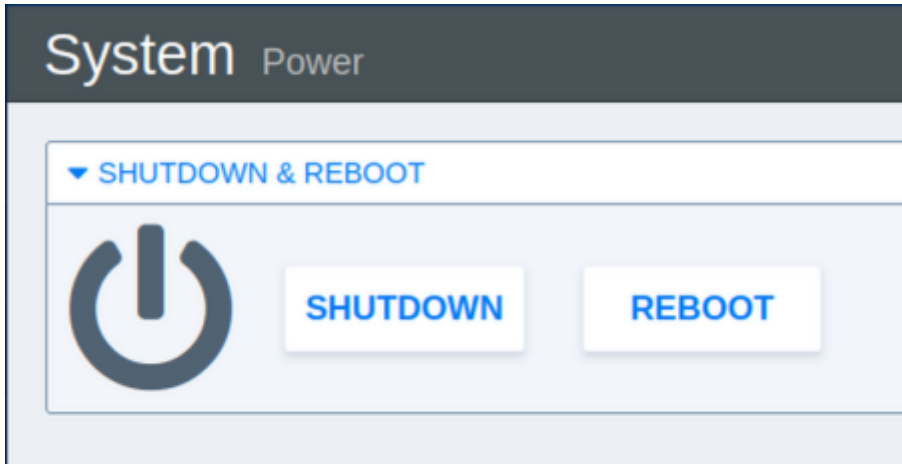

Click **Reboot** to restart the flexAI system without removing power.

Click **Shutdown** to shut down the system in a controlled manner. Once the shutdown process has completed, the system can be disconnected from its power source if required.

Use **Shutdown** before switching off external power supplies or unplugging the system. This allows running services and the operating system to terminate properly and helps avoid incomplete writes or configuration data corruption.

Revision #1

Created 2026-09-04 12:58:18 UTC by FK

Updated 2026-09-04 12:58:33 UTC by FK